

# GLASS CARE TIPS

Please note the following simple rules to care for your glassware. They are designed to help you maintain your glassware in top shape, ensuring long-lasting brilliance and colour intensity of all decorations - even of precious metal décors. Beverages poured into tended glasses will also preserve their inviting freshness much longer.

## Glass washing by machine

First of all, we recommend to use **only commercial dishwashing machines** for fine glassware so as to protect and preserve its decorations. Please do not use domestic dishwashers.

- Place the glasses in glass baskets made of plastic and fitted with stop mechanism
- Do not wash together with dishes or flatware
- Water pressure max. 0,3 to 0,4 bar
- Water hardness max. 6° d H (use a water softening installation if applicable)
- Use special detergents (i.e. cleaners **not** containing caustic alkali)
- Adhere precisely to manufacturer's dosage directions
- Ideal temperature: 55°C
- Washing time: max. 2,5 minutes
- Let glasses fresh out of the dishwasher cool down, do not shock-cool them with cold water below 15° C
- Rinse dry glasses with cold water before drawing beer

## Glass washing by hand

- Wash glasses in hand-hot water using a little washing-up liquid
- Rinse thoroughly with warm, then with cold water.
- Let the glasses drain and dry on a grid, with the bowl down
- Do not wipe or polish with cloth as cloth is never entirely free of oily residues
- Keep dry glasses in a closed glassware cabinet
- Rinse dry glasses with cold water before drawing beer

**Do you wish to receive more information?  
We will be pleased to assist you at any time.**



DAS GLAS. Und mehr.